

## BIC HOLDER

Part Number	Name	Description	Qty.
3451439A	Holder, Top+	Not for BIC Top holder IV Pole	1
3451438A	Holder, Bottom+	Not for BIC IV Pole only	1
34570420	Pressure Spring for BIC Holder	Rotary Spring	1
34570748	Stop Position for SOLECARD Holder	Plastic knob attached to side wall of machine	1
3456009A	Swivel Arm		1
34570594	O-ring 9.2 x 2.7	Clear Silicone O-Rings for piercing spike	10
34570241	O-RING 9,19X2,62 Optional	Black O-ring for piercing spike	5
3451962C	INFUSION POLE	IV Pole	1
34570780	Y-Tubing Connector 4-6-4	Between Sol cart housing and Bicarb pump	1
34570861	T-TUBING CONNECTOR 6-4-6 MM	(VBKS,VBKO & top of SolCart)	5 Pac
34517138	Reed Sensor With Contact and O-Ring	Detects closure of holder	1
34562252	Eccentric Sleeve	To Stop Swivel Arm Position [with washers and screws]	1
34565213	Silicone tubing [2.9 x 3]	Silicone Tubing between Y connection and BICP	10m
34561498	Filter 2.6 mm	FBIC Same for both versions	5 Pac
<b>Version 1 (6 screws on cover plate)</b>			
3451437B	Housing, Top V1	For BIC	1
3451444A	Cover for Housing Bottom		1
39112888	Tension Spring for SOLECARD Top Holder	For push button	1
34519866	Slide Ring		1
<b>Version 2 (3 screws on cover plate) SN 220059 ↑</b>			
34562079	<b>Top/Bottom Housing</b> (1 x push button) (pressure spring) (top housing) (2 x tubing clamps SNP1.5) (2 x short lids incl. orings) (top lid) (8 x screws 35x25) (torsion spring) (bottom housing); (bottom lid incl. o-ring) (o-ring 8.0 x 1.6) (nut M6) (screw M6x35)	Replacement KIT For Bottom and Top Housing	1 kit
34562095	HOUSING BOTTOM INCL LID	Base for Solecart (incl. Lid & Screws)	1
34562087	HOUSING TOP INCL LID	Housing that slides up for Solcart (incl. Lid & Screws)	1
38355293	Codid clamping pin	Push Release for SOLCART Top Holder	1
34570902	Pressure Spring	Spring loads Push Button	10
34562109	Valve With Piercing Spike, Short	Spike for Sol Cart	1