

## Solcart

Part Number	Part Name	Technical Description	Qty.
<b>Version 1 (6 Screws Holding on Bottom Cover)</b>			
3451439A	Holder, Top	Iv pole holder	1
3451437B	Housing, Top V1	For BIC	1
3451443A	Housing, Bottom V1	For BIC	1
3451444A	Cover for Housing Bottom	Plastic Cover Under the Housing	1
34570420	Pressure Spring for BIC Holder	Rotary Spring	3
34570748	Stop Position for SOLECARD Holder	Plastic Stopper for Top Housing	1
3456009A	Swivel Arm	Version 2	1
34570780	Y-Tubing Connector [4mm-6mm-4mm]	Y Connector by BIC Pump	1
39112888	Tension Spring for SOLECARD Top Holder	For push button	1
34519866	Slide Ring	Slide for Top Housing to Move on IV Pole	1
34561498	Filter 2.6 mm	FBIC	5
34570594	O-ring [9.2 x 2.7]	Clear Silicone O-Rings for piercing spike	10
34517138	Reed Sensor [with contacts & O-ring 3.68 x 1.78]	Reed Sensor for Solcart	1
3451962C	Infusion Pole	IV Pole	1
<b>Version 2 (3 Screws Holding on Bottom Cover)</b>			
3451439A	Holder, Top	Holds IV pole, Above Sole cart Top Housing	1
34570748	Stop Position for BIC Holder	Plastic Stopper for Top Housing	1
34562079	Top/Bottom Housing	Replacement Kit For Bottom and Top Housing: (1 push button with pressure spring) (top housing w/ lid) (8 screws 35x25) (torsion spring) (bottom housing w/ lid) (O-ring 8.0 x 1.6) (nut M6) (screw M6x35)	1 kit
34562095	Bottom Housing	Base for Solcart (incl. Lid & Screws)	1
34562087	Top Housing	Housing that Slides up for Solcart (include. Lid & Screws)	1
3456009A	Swivel Arm	Connects Top and Bottom Housing, Version 2	1
34562252	Eccentric Sleeve	To Stop Swivel Arm Position [w/ Washers & Screws]	1
39700224	Eccentric Tube BIC Sleeve	For swivel arm [w/ Washers and Screws]	1
34570420	Torsion spring	Rotary Spring [for Swivel Arm]	5
34570902	Pressure Spring	Spring for Push Button	5
34562109	Valve With Piercing Spike, Short	Spike for Solcart	1
3451962C	Infusion Pole	IV Pole	1

Part Numbers Current as of 11/29/2018